

INSTALLATION GUIDE

ID-Sx7x/yyy Self-Mounting Photoluminescent Signs for Marine, Oil & Gas and Industrial Applications



FP BRACKETS

PRE-INSTALLATION



[a] IDIGO Signage Plate (1.0mm Backing)




Grip Gloves*



M6 Bolt Spanner*



[b] SS316 1.0mm Bracket

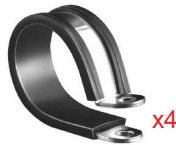

[c] SS Pipe Mounts with Rubber



[d] SS316 M6 Bolt



[e] SS316 Serrated Washer




[f] Nyloc Nuts

INSTALLATION


- 1 Start with Top Left of set up and place [c] on the railing.




- 2 Place the accessories in the order of [d], [e], [c].

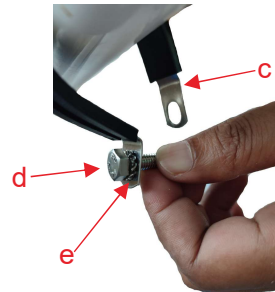


- 3 Continue to [b], [c] and secure with [f]

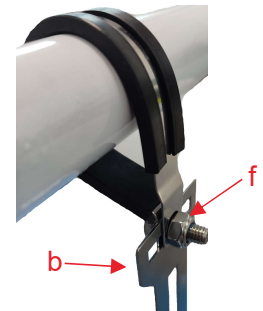


- 4 Now that you're completed with [1], proceed to do [2], [3], [4]

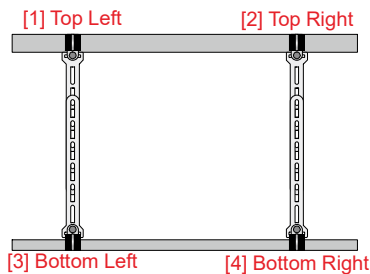

- 5 Once step #4 is done, place your signage on [f] as shown below and secure top 2 points.

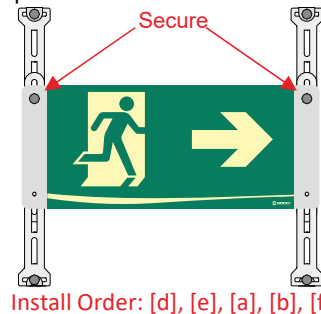

- 6 Continue to secure the bottom points and you are done.

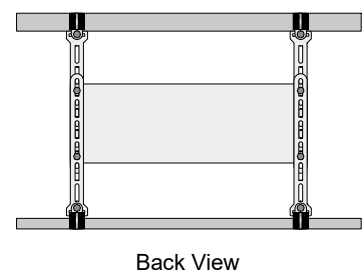

GENERAL

- Brackets are adjustable based on distance between the handrails.
- Signs with brackets have an additional 25mm space at both sides for mounting holes.

*Recommended tools

COMPLETE!

